





1. Press [Set up]button
2. Recall memory 2
3. Press [Measure]button
4. Select the parameter to be displayed, P-P value.